

Robin by Fibre ⚡ood





Robin by Fibre ⚡ood




2 - 14 years

Who needs another jacket this spring when you can pull on this comfy oversized jumper? It's 100% child friendly with its standing collar and easy-peasy snap closure. The wrist trim and hem band are finished with ribbing fabric. The cool kangaroo pocket at the front is the perfect spot for storing sweets, knick-knacks, and treasures. Cool feature: the horizontal lapped seam across the back.

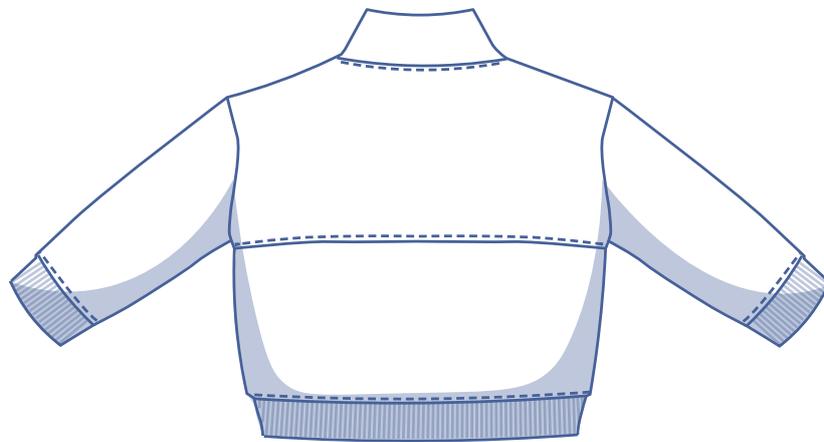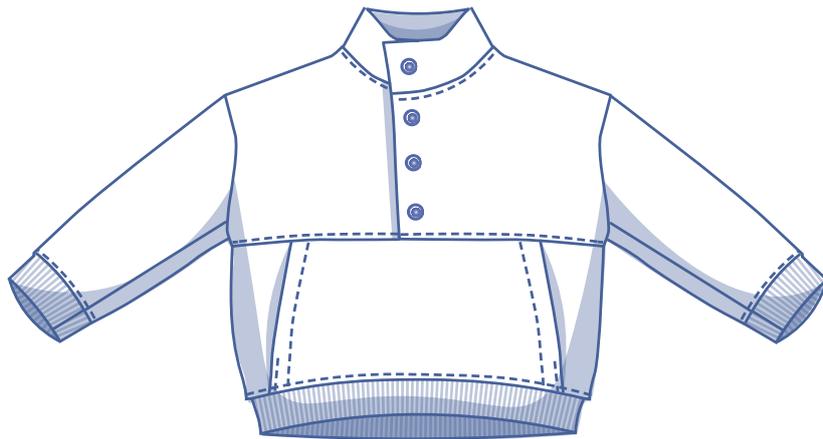


size chart (in cm)

size	2	3	4	5	6	8	10	12	14
body height	92	98	104	110	116	125	137	150	160
C (chest)	52	54	56	58	60	64	68	72	76

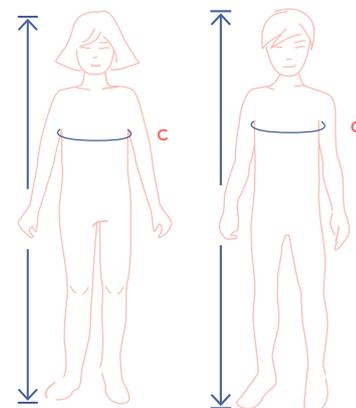

To select the right size for this pattern, the **chest measurement** should be your guideline (regardless of age or height). Pick the size closest to the actual chest measurement. Alter the length of the chosen size based on the length that matches the child's height or age. Check the table below for the correct lengths.

pattern measurements (in cm)

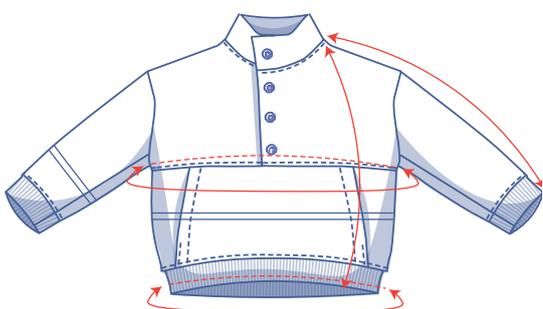


This chart's measurements are the pattern measurements based on the fabric type and serve as a reference. Ease has been added to the width measurements (in addition to the exact body measurements) for a more comfortable fit. Robin is designed to be **oversized**. Depending on the preferred cut, you could decide to go a size smaller or larger than the recommended size.

size	2	3	4	5	6	8	10	12	14
length*	36	38.25	40.75	43	45.5	50.25	55	59.75	64.5
sleeve length**	33.75	36.5	39.5	42.25	45.25	51.25	57.25	63.25	69.25
bust	76	78	80	82	84	88	92	96	100
hem band circumference***	66.25	68	70	71.75	73.5	77.25	81	84.75	88.25

* Including hem band.

** Including the shoulder length and wrist trim.

*** Measured when the hem band is not stretched. → FYI: the hem band is made from trim fabric.

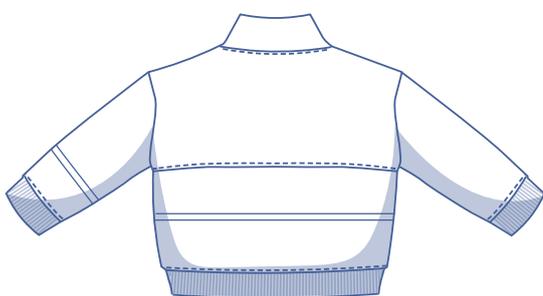

Compare the stated lengths to the measured or desired lengths. **Lengthen** or **shorten** the body and/or sleeves by cutting the pattern pieces at the indicated double lines. Then either increase the distance between the cut pieces by the desired amount (to lengthen), or overlap the pieces (to shorten). Make sure that the CF and CB lines and the side seams are always straight.

IMPORTANT

Adjust the amount of fabric to be used based on these alterations.



notions



- Thread
- Snaps (Ø 1.5 cm): 4 (2-10 y), 5 (12-14 y)
- Iron-on interfacing: max. 15 cm
- Trim fabric (width 35 cm): 45 cm
- Fabric: see table

fabric		2	3	4	5	6	8	10	12	14
fabric width 110 cm	cm	70	75	90	100	105	130	145	155	170
fabric width 140 cm	cm	60	65	70	70	85	95	100	110	120


The corresponding fabric layout can be found on page 6 of these sewing instructions.

fabric advice



Make Robin in a knit. We recommend French terry, sweatshirt fabric, or jacquard. Use ribbing for the wrist trim and hem band.


Proud to be #Sewista

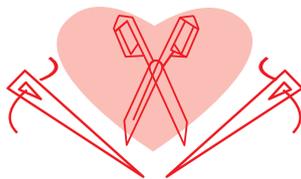

pattern pieces & seam allowances (in cm)

To sew the garment as described in the instructions, draw the illustrated seam allowances around the paper pattern pieces before cutting them out. If you are using a PDF pattern, the pattern can be printed with or without seam allowance.

To find out more, watch the [video](#).

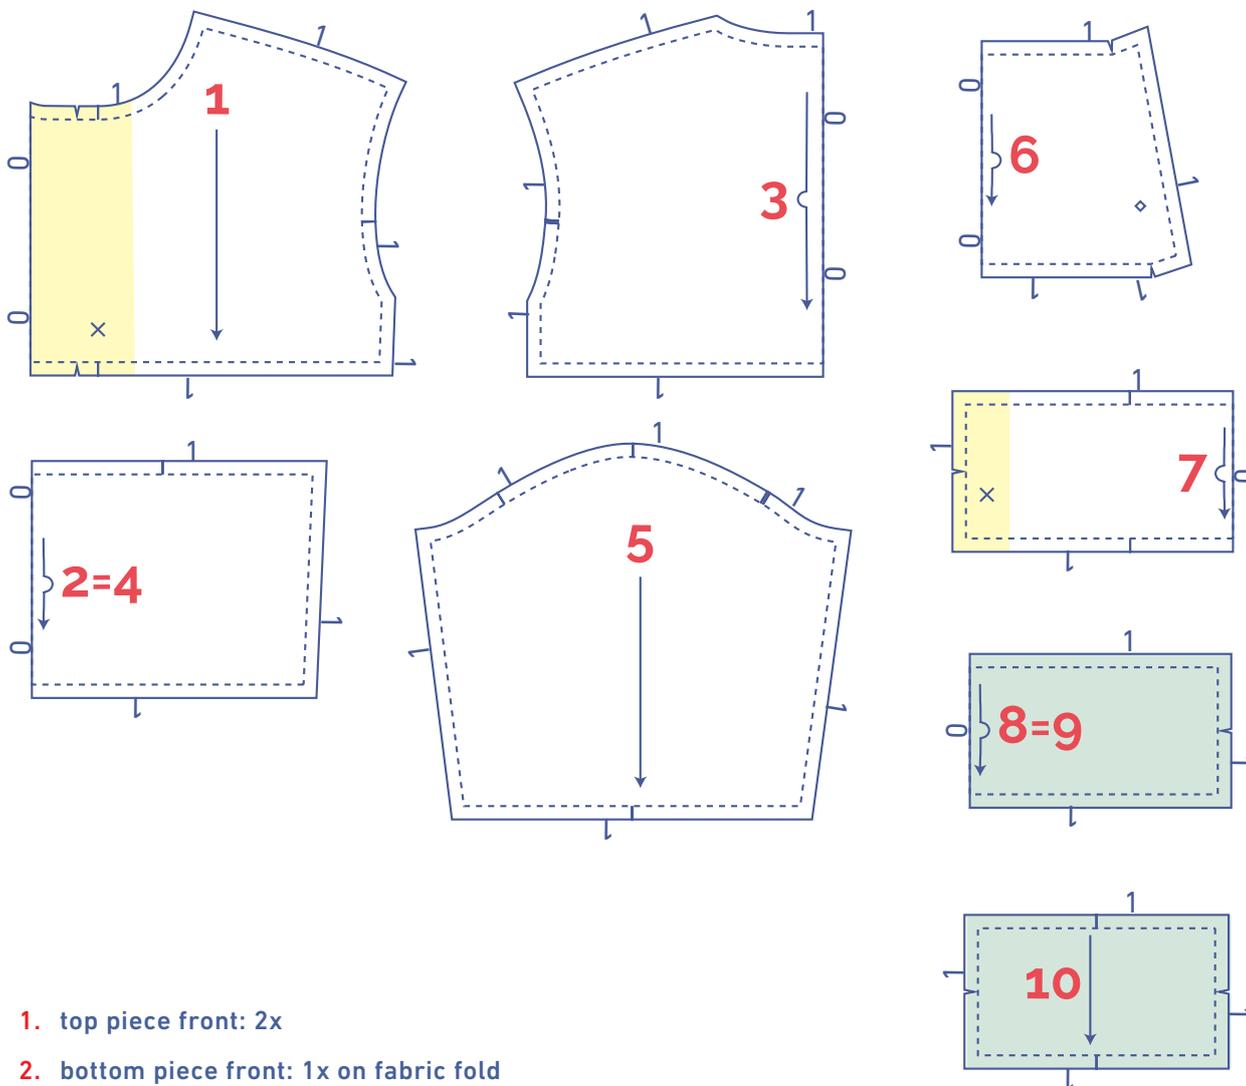

1. top piece front: 2x
2. bottom piece front: 1x on fabric fold
3. top piece back: 1x on fabric fold
4. bottom piece back: 1x on fabric fold
5. sleeve: 2x
6. pocket: 1x on fabric fold
7. collar: 1x on fabric fold
8. hem band front: 1x on fabric fold
9. hem band back: 1x on fabric fold
10. wrist trim: 2x

IMPORTANT

The pieces highlighted in light yellow have iron-on interfacing attached to the wrong side.

IMPORTANT


Pattern pieces 2 and 4, and 8 and 9 are the same pattern pieces.

?	material type
	fabric
	iron-on interfacing
	trim fabric


fabric layout – solid fabrics

fabric width 110 cm


2 - 3 years

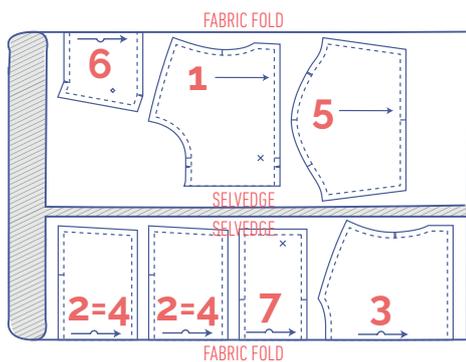

4 - 6 years

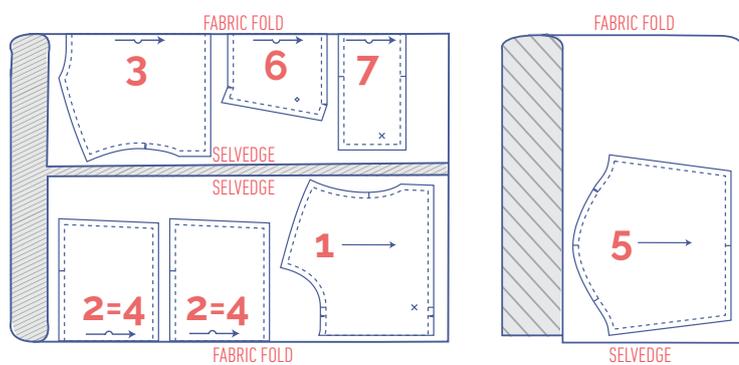


8 - 14 years

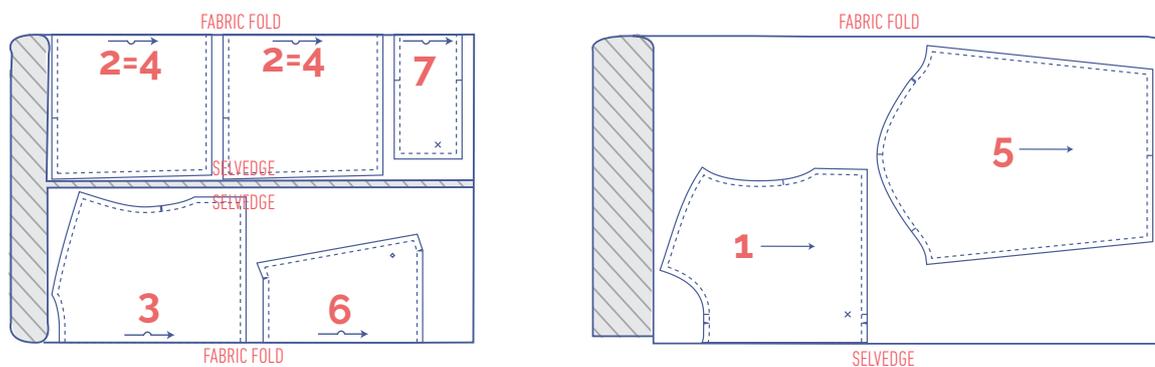


fabric layout – solid fabrics

fabric width 140 cm


2 - 5 years

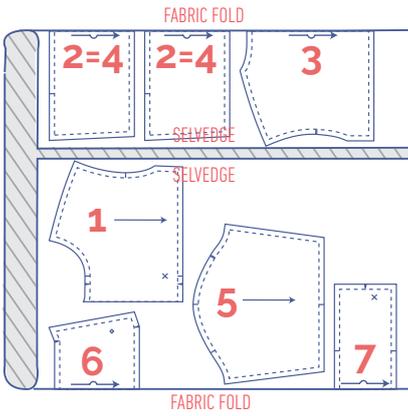

6 - 14 years

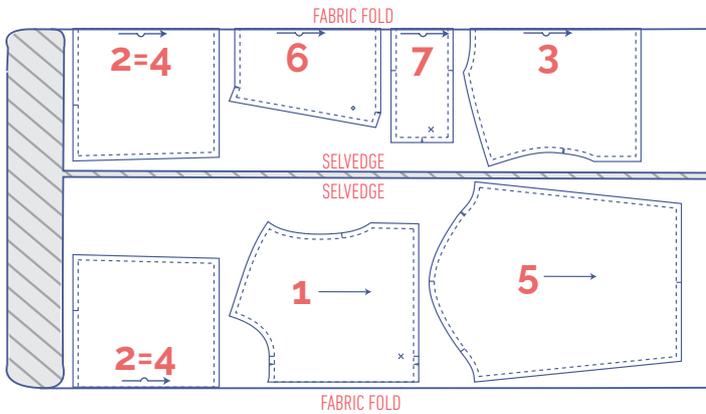

trim fabric for all sizes
(2 - 14 years)

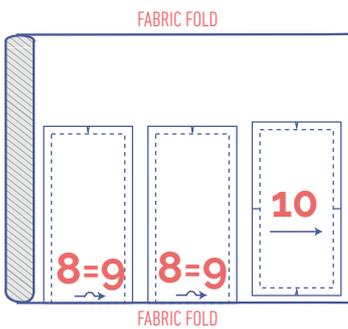

marking pattern pieces



Notch the pattern paper and fabric at the following points



single notch



double notch



V notch



Mark the following points using marking thread



centre point





snap/button

sewing instructions



Because you are sewing with knit fabric, you will need to use a stretch stitch setting on your sewing machine to sew the seams and an overlock stitch to finish the raw edges. The seams can also simply be sewn with a 4-thread overlocker, i.e. 2 upper looper threads and 2 lower looper threads. Finish the raw edges and sew the seams together at the same time. The seams will stay stretchy. For the topstitching you can use a regular stitch.

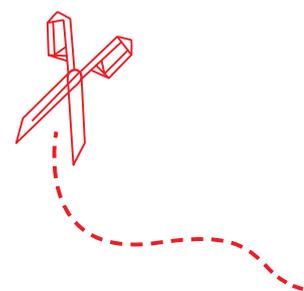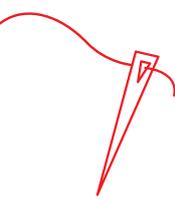

FP front panel

B back

CF centre front

CB centre back

RF right front piece



LF left front piece




right side



wrong side




trim fabric

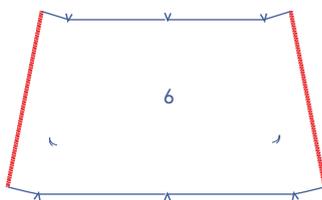


1


Finish the indicated raw edges of the pocket (6) with overlock stitching.

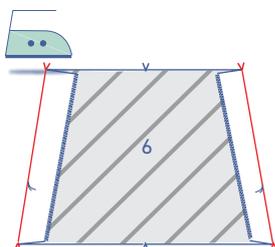

Press the finished edges towards the wrong side at the V notches.

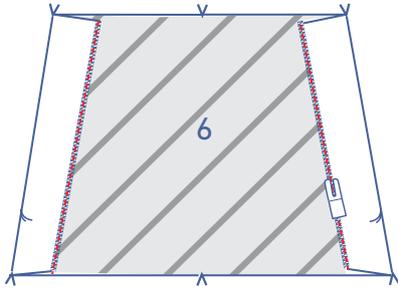


Stitch into place.

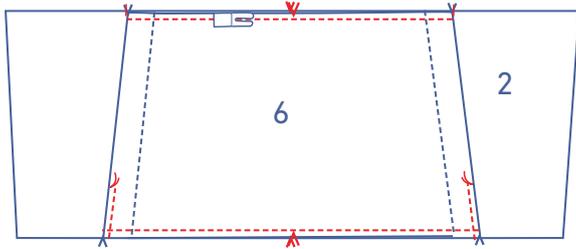


2


Pin the pocket to the front bottom piece (2). Stitch the short slanted ends into place (where shown) right next to the edge up to the marking thread. Stitch the top and bottom edge of the pocket into place right next to the raw edge.

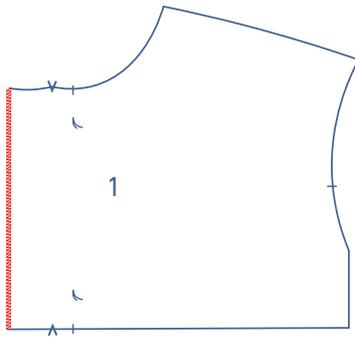


Finish the raw edge of the front top piece (1) with overlock stitching.

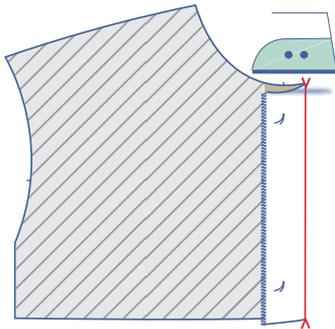


Press the facing towards the wrong side at the V notches.

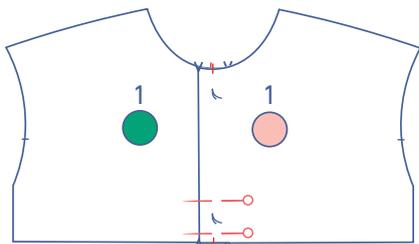



Place the LF on top of the RF, matching the CF notches. Pin both pieces so that they are joined securely.

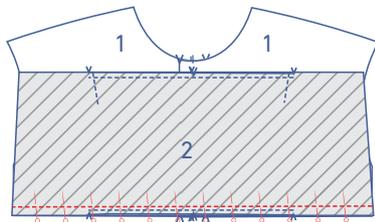


Pin and sew the front top piece to the front bottom + pocket, matching the notches.

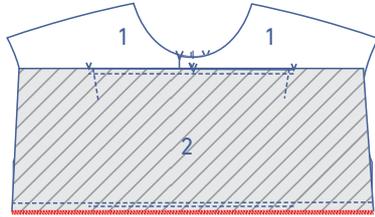

Finish the raw edges with overlock stitching.

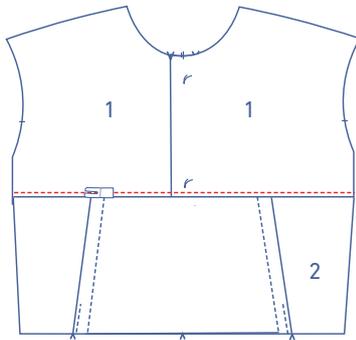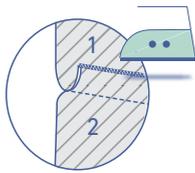


Press the seam allowance up and topstitch the top piece at presser foot width from the seam.

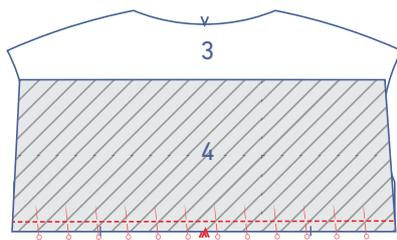



3

Pin and stitch the back top piece (3) to the back bottom piece (4), matching the markings.

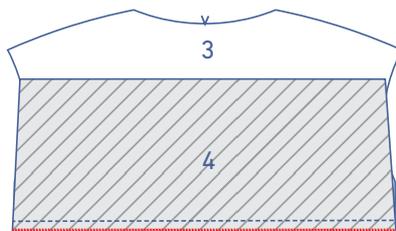


Finish the raw edges with overlock stitching. Press the seam allowance up.

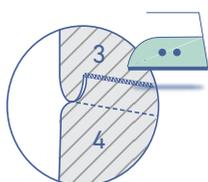

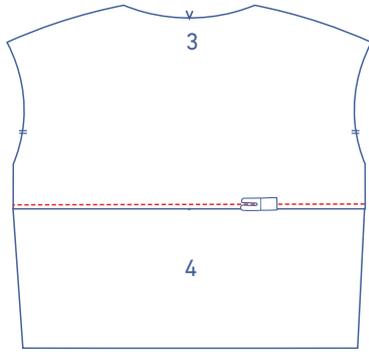


Topstitch the top piece at presser foot width from the seam.

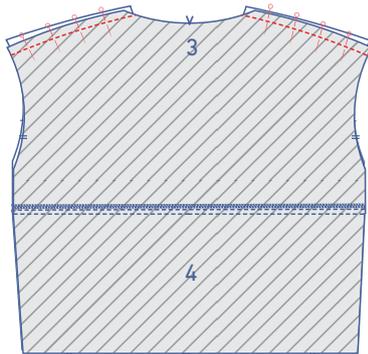


4

Pin and sew the shoulder seams together.

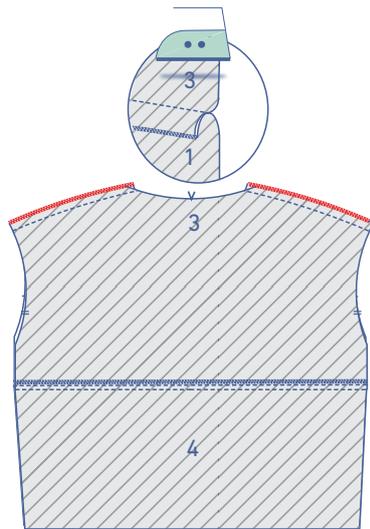


Finish the raw edges together with overlock stitching and press the seam allowance towards the front.

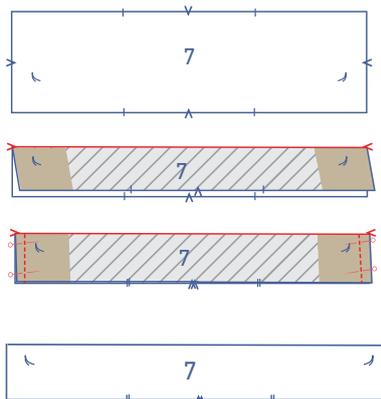


5

Fold the collar (7) in half lengthwise with the right sides touching. Pin and sew the short ends together.


Turn the right way out.

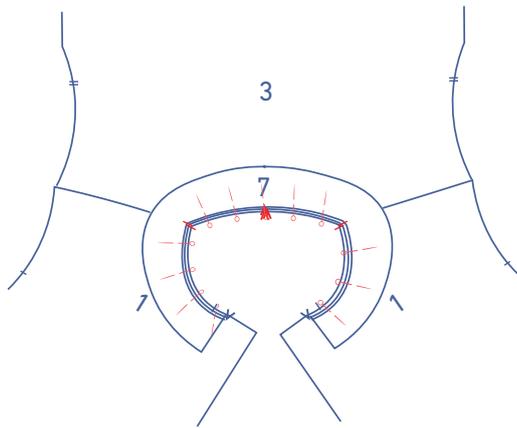


Pin and sew the raw edge of the collar to the neckline, matching the notches. The finished edge of the collar should align with the V notch. The circumference of the collar is a little smaller than the neckline so pin at all the notch points and gently stretch out the collar as you sew.

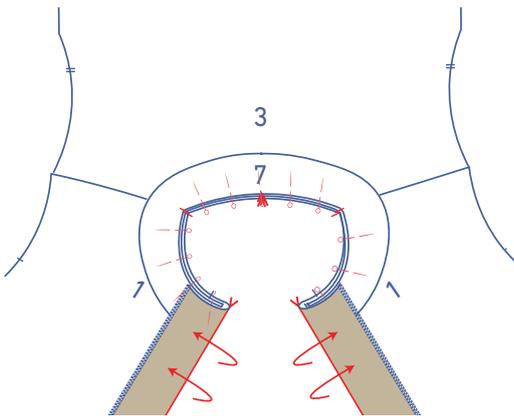


Fold the facing over the collar towards the right side of the garment at the V notch.

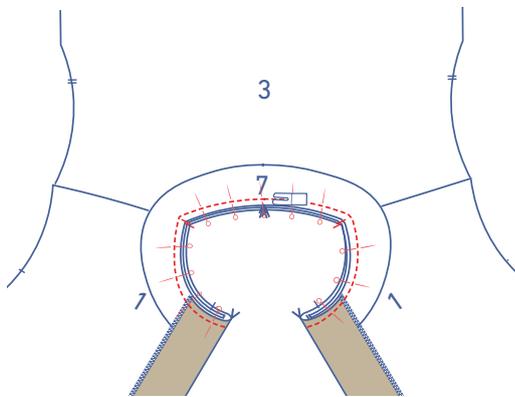


Stitch the collar into place.

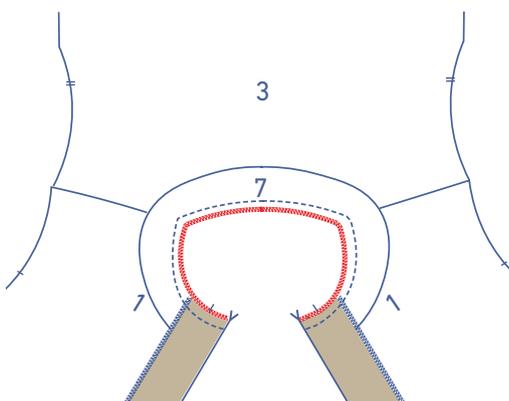

Finish the raw edges with overlock stitching.

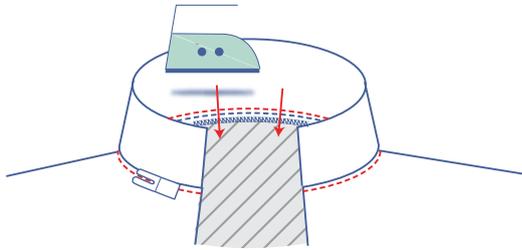


Flip the facing over to the wrong side. Press the seam allowance down and topstitch the top piece at presser foot width from the seam.

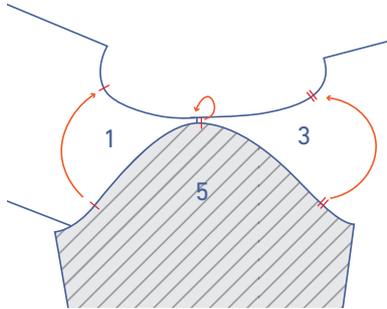


6

Pin and sew the top of the sleeve (5) (= the sleeve cap) to the armhole, matching the markings. The single notch marks the front, while the double notch marks the back. The top notch aligns with the shoulder seam (shoulder point).

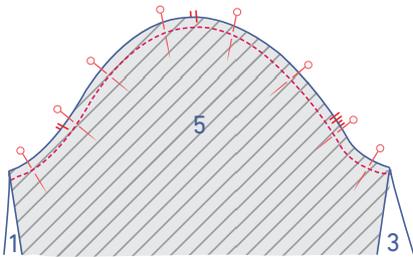







Finish the raw edges together with overlock stitching.

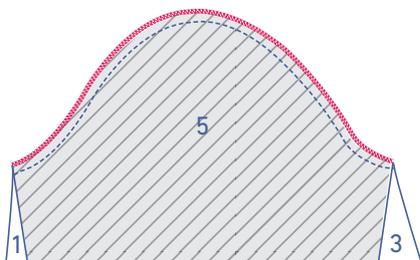

Pin and sew the side and underarm seams.

Finish the raw edges together with overlock stitching.

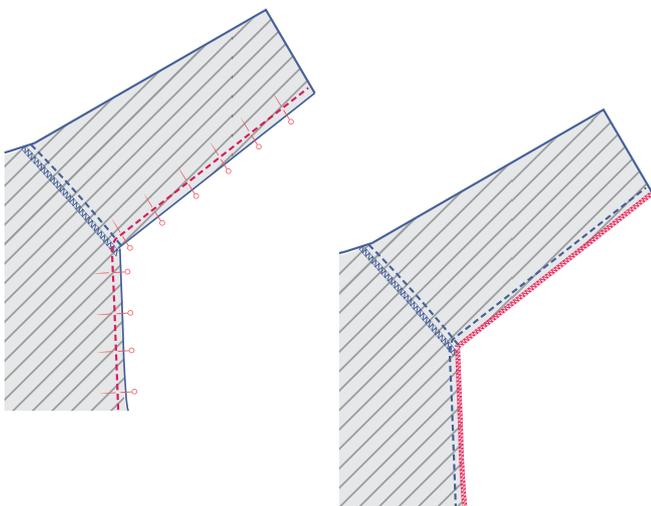

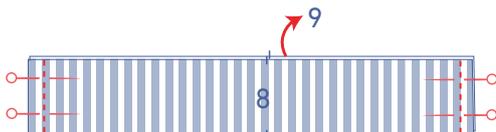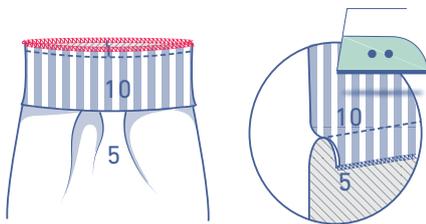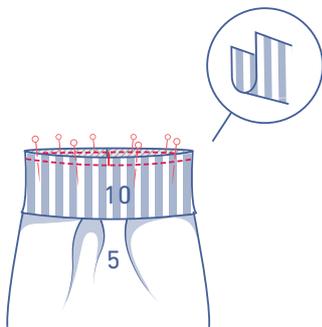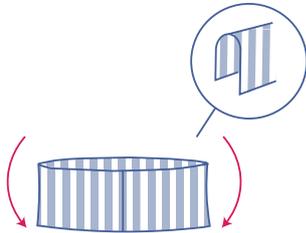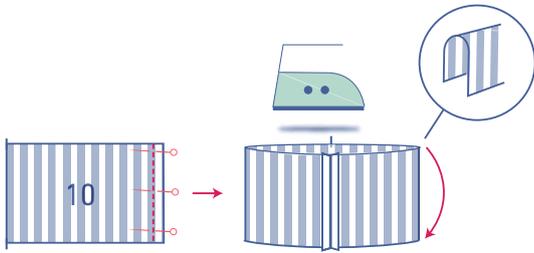

7

Sew the short ends of the wrist trims (10) and press the seam allowance open.

Press the wrist trim in half lengthwise with the wrong sides of the fabric facing.


Slide the wrist trim over the bottom of the sleeve so that all the raw edges are aligned. Pin and sew, making sure the seams and notches match. The circumference of the wrist trim is smaller than that of the sleeve hem. So, carefully stretch out the wrist trim as you sew.

Finish the raw edges with overlock stitching. Press the seam allowance towards the sleeve.


Topstitch the sleeve right next to the seam.

8


Pin and sew the side seams (i.e. the short ends) of the hem band front (8) and hem band back (9) together and press the seam allowance open.

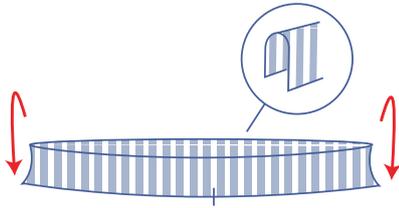


Press the hem band in half lengthwise with the wrong sides of the fabric facing.

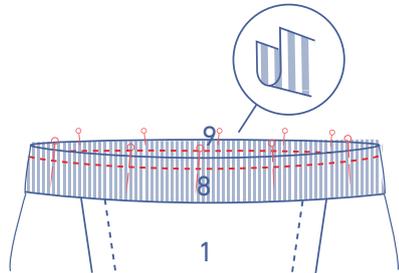



Slide the hem band over the bottom of the jumper so all the raw edges are aligned. Pin and sew, making sure the seams and markings match. The circumference of the hem band is smaller than the circumference of the garment. Make sure to pin all the notch points and stretch out the hem band to the bottom of the jumper as you sew.

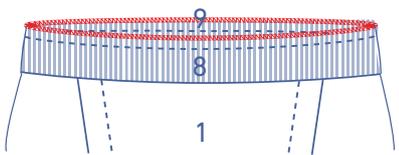

Finish the raw edges with overlock stitching.

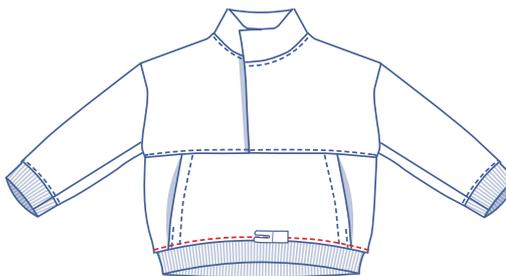

Press the seam allowance up towards the bottom piece and topstitch the bottom piece right next to the seam.

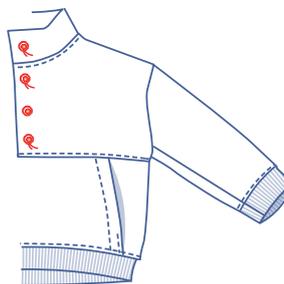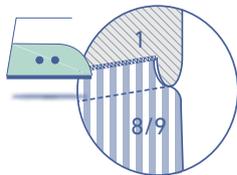

9

Attach the snaps where indicated. The positions of the top and bottom snaps have been marked on the pattern for you. Divide the distance between these evenly to determine the location of the other snaps.

